



GENERAL FILTERS
INCORPORATED

GeneralAire® Model SL16
Flow Through Humidifier

Legacy Series Humidifier
(GFI #5000)

Breathe Healthier

Control Indoor Humidity.

Installing a GeneralAire® Whole House Humidifier can reduce allergy and asthma symptoms, minimize risk of infection, protect valuables (such as furniture, woodwork and musical instruments) and save you money.



How The SL16 Works:

Your furnace sends warm air through a water-soaked Vapor Pad® inside your humidifier, where it absorbs additional moisture. Newly-moistened air is then distributed throughout your home to provide healthier air for you and your family.

Details inside or go to: www.generalfilters.com/modelSL16

Maintenance

Maintenance of your new GeneralAire® SL16 Legacy Flow Through Humidifier is minimal. To ensure peak performance and reliable operation, simply change your Vapor Pad® once per year and clean mineral deposits from the water pan. A solution of 1/2 vinegar and 1/2 water is suggested. Go to [www.generalfilters.com / support center / video library](http://www.generalfilters.com/supportcenter/video) to watch a video demonstrating how to perform maintenance on your SL16.

Install A Humidifier In Your Home To:

Protect Your Family's Health:

Low humidity is where viruses can thrive, causing your throat and nasal passages to dry. This leads to nose bleeds, increased risk of infection, colds, flu and other respiratory ailments. Dry air can trigger asthma and allergy symptoms. Air that's too dry causes dry/itchy/cracked skin.

Protect Your Valuables:

Dry air in your home can cause expensive artwork, wood flooring, cabinets, furniture and musical instruments to crack. Dry air increases annoying static shocks that can damage electronics.

Save Money:

Since dry air can cause woodwork to crack, resulting gaps in windows & doors let cold outside air in. In addition, dry air feels colder. Take the chill out with an SL16. Turn your thermostat down and save money.

Why A Whole-House Unit?

- Treats Your Whole House 24 / 7 / 365
- Requires Minimal Maintenance
- Out of Site
- Quiet



General Filters, Inc.
43800 Grand River Avenue
Novi, Michigan 48375
Toll Free: (866) 476-5101
www.generalaire.com



Canadian General Filters, Ltd.
400 Midwest Rd.
Toronto, ON M1P3A9 Canada
Toll Free: (888) 216-9184
www.cgfproducts.com





GENERAL FILTERS INCORPORATED

GeneralAire® Model SL16 Flow Through Humidifier

Legacy Series Humidifier (GFI #5000)



Water Intake Valve

- Brings water into unit and to the distributor trough.

Distribution Trough

- (Inside)
- Features the patented KineticFlo water distribution system.
- Ensures every square inch of the Vapor Pad® is covered for consistent evaporation throughout.

Bypass Duct

- Mount to left or right.

Water Drain Tube

- For automatic draining of water from unit.

Solenoid Valve Assembly

Cover Tab (Found on Both Sides at Top)

- Slightly lift bottom of tabs up / out from unit to “swing” cover open and down for easy maintenance of unit.

Left Bypass Cover

Cover

- Made with an ultra-violet stable automotive-grade plastic for long-lasting durability.
- Cover remains attached at bottom for easy open / close.
- Cover can be easily opened in small / tight spaces.
- No tools are required to open cover.
- User-friendly annual Vapor Pad® replacement and maintenance!

Included

MXH3C Manual Humidistat

- Easy-to-Use Dial.
- Mount on Wall or Duct.
- Contemporary Design.
- Simply Turn The Dial To The Desired Humidity Level.
- Towards 75 = More Humidity / Towards 10 = Less Humidity.



Save Water!

With the Water Savor™ Controller!

- Reduce water going down the drain from your humidifier by a minimum of 50%; even more with customized settings!
- Learn more at www.generalfilters.com.



How Much Humidity Do I Need?

Ideally, your home's humidity levels should stay between 40% and 60%. Outside that range, your risk of being adversely affected increases.

Winter Settings

During winter months, be sure the water supply is turned on, your damper control is set to “Open” or “Winter”, and your humidistat is set somewhere between 40% and 60%.

Replacement Vapor Pad®

(Replace At The Start Of Each Heating Season)

GFI #7002: 990-13

GENERAL FILTERS INCORPORATED
GeneralAire® Vapor Pad®
990-13 (GFI #7002)

Replacement for Whole-House Legacy Humidifiers: 700, 990, 1040, 1042, 1137, & SL16

- Replaces all pad styles without extra charges and handles the
- Replacement pads are made of automotive-grade plastic.
- Replacement pads are made of automotive-grade plastic.
- Pad is made of automotive-grade plastic.
- Pad is made of automotive-grade plastic.

Are you concerned that too much water is going down the drain?
Install the GeneralAire® Water Savor™ Controller!

Save Water! Save Water! Save Water!

- Reduces water going down the drain from your humidifier by a minimum of 50%.
- Pad is made of automotive-grade plastic.
- Pad is made of automotive-grade plastic.

Maintenance Instructions:
Change your Vapor Pad® once each year.

GENERAL FILTERS INCORPORATED
Gar Ber
CGF PRODUCTS

Spec Sheets Are Available On www.GeneralFilters.com (Support / Literature).

Our Brands



General Filters, Inc.
43800 Grand River Avenue
Novi, Michigan 48375
Toll Free: (866) 476-5101
www.generalair.com



Canadian General Filters, Ltd.
400 Midwest Rd.
Toronto, ON M1P3A9 Canada
Toll Free: (888) 216-9184
www.cgfproducts.com

Last Updated: 2-2018 GFI LIT#: SL16

Download online at: www.generalfilters.com/literature/brochures. All information subject to change without notice.

PURE MICHIGAN®